



# Manual usuario samsung gt-c3590

Document has moved here →

## Safety precautions

To prevent injury to yourself or others or damage to your device, read all of the following information before using your device.

### Warning: Prevent electric shock, fire, and explosion

- Do not use damaged power cords or plugs, or loose electrical sockets.
- Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord.
- Do not bend or damage the power cord.
- Do not use your device while charging or touch your device with wet hands.
- Do not attempt to charge the battery.
- Do not plug or cause an impact to the charger or the battery.
- Do not charge the battery with chargers that are not approved by the manufacturer.

- Do not use your device during a thunderstorm. Your device may malfunction and your risk of electric shock is increased.
- Do not handle a damaged or leaking Li-Ion battery (Li-Ion) battery. For full information of your Li-Ion battery, contact your nearest authorized service center.

### Heads and display of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause overheating or damage to your device.
- Never disassemble a battery or device as it is. Follow all local regulations when disposing of used batteries or devices.

www.samsung.com

- Never place batteries or devices on or in a heating device, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can result in internal short-circuit and overheating.
- Protect the device, batteries, and chargers from damage.
  - Avoid exposing your device and battery to very cold or very hot temperatures.
  - Extreme temperatures can cause the deterioration of the battery and reduce the charging capacity and life of your device and battery.
  - Prevent batteries from contacting metal objects, as this can create a short-circuit between the + and - terminals of your battery and lead to temporary or permanent battery damage.
  - Never use a damaged charger or battery.

### Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device when prohibited. Comply with all regulations that restrict the use of a mobile device in a particular area.

### Do not use your device near other electronic devices

- Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.
- Avoid using your device within a 50 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.

### Reduce the risk of repetitive motion injuries

When you repeatedly perform actions, such as pressing keys, drawing characters on a touch screen with your finger, or playing games, you may experience occasional discomfort in your face, neck, shoulder, or other parts of your body. When using your device for extended periods, treat the device with a soft grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort despite using after such use, stop use and see a physician.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, or recharging any unused battery life.
- Over-time, unused batteries will discharge and must be recharged before use.
- Disconnected chargers from power sources where not in use.
- Use the battery only for their intended purposes.

### Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Some chargers cannot be repaired for the user's safety when using accessories or supplies that are not approved by Samsung.

### Do not bite or suck on the device or the battery

- Doing so may damage the device or cause injuries.
- If children use the device, make sure that they use the device properly.

### When speaking on the device

- Hold the device upright, as you speak with a traditional phone.
- Speak directly into the microphone.

- To minimize the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

### Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you generally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

### If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

### Turn off the device in potentially explosive environments

- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refueling points (service stations), near gas or chemical, and at loading areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

### Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

### Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to the radio frequency of your device. Contact the manufacturer for more information.

### Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is possible by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Get to know your device and its conversation features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Park your vehicle safely or pull over. Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer if you can.
- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Pull over, slow down, or pull into heavy traffic if you are driving. Do not make calls or look at phone numbers. Inform others a "do not" or "pulling through" address book takes attention away from your primary responsibility of driving safely.
- Do not make any calls while driving. These calls often put you at risk of being pulled into traffic. Try to place calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in manual or manual conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergency.
- Use your device to help others in an emergency. If you see an auto accident, a crime in progress, or a medical emergency where help is in danger, call a local emergency number.
- Call roadside assistance at a special, non-emergency assistance number when necessary. If you see a broken-down vehicle pulling up behind a road, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

### Proper care and use of your mobile device

#### Keep your device dry

- Handle dry or all types of liquids may damage device parts or electronic circuits.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately if the device will not turn off; you cannot remove the battery, leave it to dry. Then, use the device with a towel and take it to a service center.
- Liquids will damage the color of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

#### Do not use or store your device in damp, dirty areas

- Do not use your device in locations that are damp, dirty areas. Dust can cause your device to malfunction.

#### Do not store your device on slopes

- If your device falls, it can be damaged.

#### Do not store your device in hot or cold areas. Use your device at 0°C to 35°C

- Your device can operate if it is stored in a closed vehicle, as the inside temperature can reach up to 65°C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 5°C to 40°C.

#### Do not store your device with metal objects as coins, keys and needles

- Your device may become deformed or malfunction.
- If your battery terminals are in contact with metal objects, it may cause a fire.

#### Do not store your device near magnetic fields

- Your device may malfunction if the battery may discharge from magnetic fields.
- Magnetic strips, cards, including credit cards, phone cards, postage, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

#### Do not store your device near or in heaters, radiators, heat cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

#### Do not strap your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

#### If your device has a camera flash or light, do not use a flash close to the eyes of people or cats

- Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

#### Use cautions when exposed to flashing lights

- While using your device, leave some lights on in the room and do not rest the screen too close to your eyes.
- Sickness or dizziness can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

#### Protect your hearing and ears when using a headset

- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.

#### Use caution when using the device while walking or working

- Always be aware of your surroundings to avoid injury to yourself or others.

#### Do not carry your device in your back pockets or around your waist

- You can be injured or damage the device if you fall.

#### Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

#### Hands, feet, coins or monetary cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Prevent cards from being struck, static electricity, and electrical noise from other devices.
- Do not touch gold-colored contacts or terminals with your fingers or metal objects. If they, wipe the card with a soft cloth.

#### Ensure access to emergency services

- Emergency calls from your device may not be possible in some areas or circumstances. Before traveling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

#### Keep your personal and important data safe

- While using your device, be sure to back up important data. Samsung is not responsible for data loss.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

#### Do not distribute copyright-protected material

Do not distribute copyright-protected material that you have recorded or others without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

#### Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level known as the Specific Absorption Rate, or SAR, of 2.0 W/kg. During testing, the maximum SAR recorded for this model was 0.255 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically switching back levels when possible, your device reduces your overall exposure to RF energy.

#### Correct disposal of this product

(Applies to the European Union and other European countries with separate collection systems)

The recycling of this product, accessories or devices involves that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

#### Recycled users should contact the retailer where they purchased the product, or their local government office, for details of where and how they can take their device to an environmentally safe recycling.

Responsible users should contact their supplier and check the terms and conditions of the purchase contract. The product and its electronic accessories should not be mixed with other conventional wastes for disposal.


#### Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems)

The marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Please mark the chemical symbols on the battery to indicate that the battery contains mercury, cadmium or lead above the reference listed in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, best battery return system.

#### Phone layout

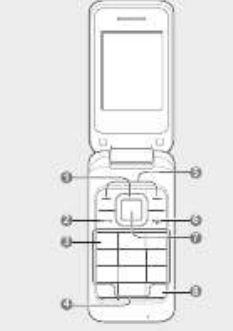

- 4-way navigation key** In idle mode, access menu-related options. In Menu mode, scroll through menu options. Depending on your service provider, you may have more options.
- Softkeys** Perform actions indicated at the bottom of the display.
- Power/End key** Turn the phone on and off (press and hold). Exit a call in Menu mode, cancel input and return to idle mode.
- Dial Key** Make or answer a call in idle mode; answer incoming calls, missed, or received numbers.
- Call/End key** In idle mode, access Menu mode; Launch the web browser (press and hold). In Menu mode, select the highlighted menu option or confirm an input. Depending on your service provider or region, the key may perform differently.
- Voice mail service key** In idle mode, access voice mail (press and hold).
- Alpha numeric keys**
- Silent profile key** In idle mode, activate or deactivate the silent profile (press and hold).

CE 0168

View and Download Samsung GT-C3590 user manual online. GT-C3590 Cell Phone pdf manual download.

View and Download Samsung GT-C3530 manual online. GT-C3530 Cell Phone pdf manual download.

Samsung Galaxy J5 SM-J500M, SM-J500M/DS, Táctil, colorida / Super AMOLED 720 x 1280 px 5,00 , Li-Ion 2600 mAh, Qualcomm Snapdragon 410 8916

Teléfonos Móviles, Smartphones y PDA Samsung Instrucciones de Uso, Manuales del Usuario, Guías de Inicio Rápido y Instrucciones de Instalación en.

iLanzada actualización de software v.2.3.0 para Octopus Box Samsung! iAgregado soporte para teléfonos Samsung Galaxy J7 y S7!